 


Installation and Removal of Suction Heads

Installing Suction Head

- Align the inclined direction of the suction head and the installation port of the suction head holder, then insert it straight until it reaches the bottom (with a slight click sound).

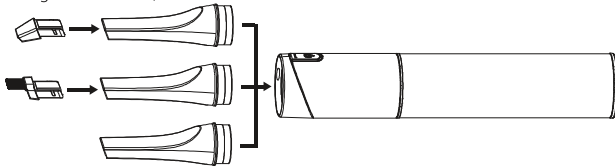

Exchange Brush Head and Nozzle Elbow on Extended Nozzle



Crevice Nozzle Suction Head Installation

Brush Nozzle Head Installation

Removing Suction Head


- To remove the installed suction head, grasp the center of the suction head and rotate it in any direction.
- Tips for removing the brush suction head: You can insert the pointed nozzle suction head into the cavity of the brush suction head and rotate it to disassemble.



Crevice Nozzle Suction Head Removal



Brush Nozzle Head Removal

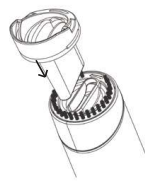

Brush Suction Head Removal Auxiliary

Maintenance and Care

- Refer to the body markings, rotate the dustbin until the arrow aligns with the unlock icon, then pull up to remove the dustbin.
- Pull out the filter from the bottom of the dustbin.
- Dispose of debris from the dustbin.
- The filter is washable and can be reused after thorough drying (recommended to replace the filter every 3 months).

CAUTION

- The body is not washable. Do not let water enter the charging port, air intake, or exhaust port!

Troubleshooting


Fault Symptoms	Possible Causes	Solutions
Red and blue dual-color light alternating flashes	Battery temperature too high	Wait for temperature to decrease
Indicator light does not illuminate during charging	Charging cable not plugged in tightly	Replug
Indicator light does not illuminate	Low battery level	Requires charging
Motor cannot operate		

Product Parameters

Model	XT01C
Power	40W
Voltage	7.4V
Dustbin Capacity	51ml
Battery Capacity	2000mAh
Product Size	45x45x235mm / 1.8x1.8x9.2 inch

Mini Vacuum Cleaner

Designed for cleaning sewing machines

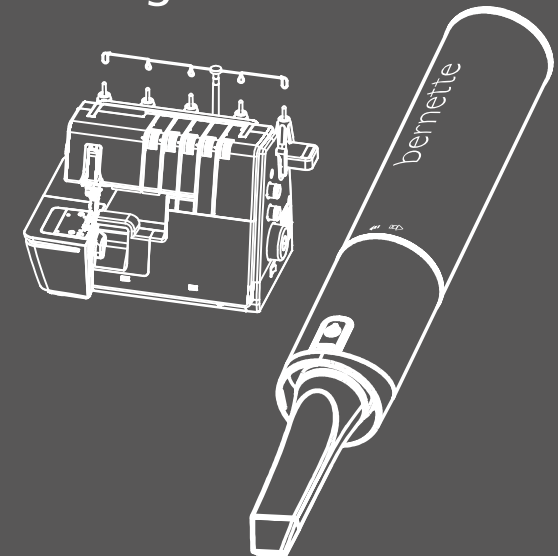

bernette

SWISS DESIGN


Art. No. 502040.60.98
2024-12 EN

Precautions


Before using this product, please read the instructions carefully and use the machine for its intended purpose as outlined in this manual. Do not use it for other purposes to avoid personal injury or damage to the machine.

1. This product is only suitable for household and in-car use. Please do not use it outdoors, in commercial, or industrial environments.
2. This product contains a built-in rechargeable battery. Do not throw it into the fire or heat it. Avoid charging, using, or storing it in high-temperature conditions, and prevent direct sunlight exposure when placed inside a car, as it may lead to overheating, ignition, or explosion.
3. It is recommended to use this product in an environment between 0°C and 40°C. The battery may not function properly outside this temperature range.
4. Do not allow individuals with impaired physical, mental, or sensory abilities to use or maintain this product.
5. Keep this product out of reach of children and do not allow them to touch, play with, use, or maintain it.
6. Do not use this product with wet hands to prevent injury.
7. Do not use it to vacuum any liquids (such as water, cola, etc.).
8. Do not use it to vacuum any burning or smoking objects (such as unextinguished cigarette butts).
9. Do not use it to vacuum hard or sharp objects (such as glass, etc.).
10. Do not apply any scented products to this product, as the chemicals in such products are flammable and may cause the product to catch fire.
11. Do not block the air intake and exhaust vents.
12. Do not operate the vacuum cleaner without installing the dustbin and filter.
13. If the vacuum cleaner is damaged, do not continue to use it.
14. Use this product according to the instructions in the manual. Users are responsible for any losses caused by improper use.
15. Do not dismantle, repair, or modify the battery by yourself.
16. Do not charge in areas near heat sources or damp locations (such as radiators or bathrooms).
17. Do not wipe the charging product with a wet cloth or wet hands.
18. When this product reaches the end of its service life and the battery cannot be removed, please dispose of the product at a government-designated recycling center.
19. If the charging cable is damaged or broken, stop using it immediately.
20. If the product is not used for a long time, please charge it fully, unplug the charging cable, and place it in a cool, dry place. It is recommended to charge it twice a week to avoid battery depletion.
21. Please use a 5V \rightleftharpoons 2A power adapter for charging (to be purchased separately) and the original USB charging cable.

Product Parts Diagram

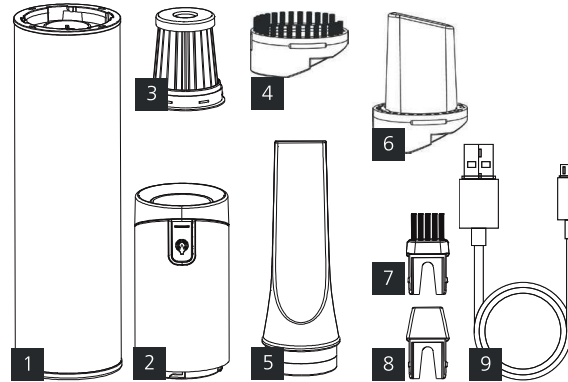

No.	Part Name	No.	Part Name
1	Main Unit	6	Crevice Nozzle
2	Dustbin	7	Brush head
3	HEPA Filter	8	Nozzle Elbow
4	Brush Nozzle	9	Charging cable
5	Extended Nozzle		

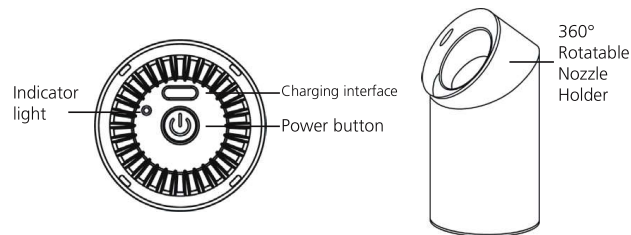

CAUTION

- As per your needs, you can optionally choose to install the crevice nozzle or the brush nozzle, or use the vacuum cleaner without attaching any nozzle directly.
- Rotate the suction nozzle base directly to change the suction direction.

Operation Steps

1. Short press the power button to start the operation.
2. While the machine is running, press the power button again to stop the operation.

CAUTION

- During use, ensure that the spring sheet in the nozzle base installation port is not stuck; otherwise, debris may fall out.
- It is strictly prohibited to vacuum without installing the filter.

Indicator Light Explanation

Operation	Vacuum Cleaner Status	Indicator Light Status
Short press does not initiate	Sufficient Battery (High Mode)	Blue light flashes quickly 2 times
	Low Battery (Low Mode)	Red light flashes quickly 2 times
	Battery Depleted	Red light stays on for 3 seconds and then goes out
After a short press to start	Sufficient Battery (High Mode)	Blue light flashes rapidly (continuously)
	Low Battery (Low Mode)	Red light flashes rapidly (continuously)
	Battery Depleted	Red light stays on for 3 seconds and then goes out
Connect the charger	Charging (High Mode)	Blue light flashes slowly
	Charging (Low Mode)	Red light flashes slowly
	Fully Charged	Blue light stays on
The battery is experiencing high-temperature anomalies		Red and blue dual-color fast flashing

Charging

1. For the initial use or after prolonged storage, please ensure to fully charge the product.
2. Suggest charging twice a week.
3. Please use a 5V \rightleftharpoons 2A power adapter (to be purchased separately) and the original USB charging cable.